

If the writing pen doesn't work in ActivInspire:

Open ActivInspire

Click File then Settings

Click on Dual mode Activboards and change the drop down lists:


 
First setting:

Touch input handling to **Full Touch Support**

Second setting:

Touch Interoperability to **OS Compatible**

Then click on 'Done'.

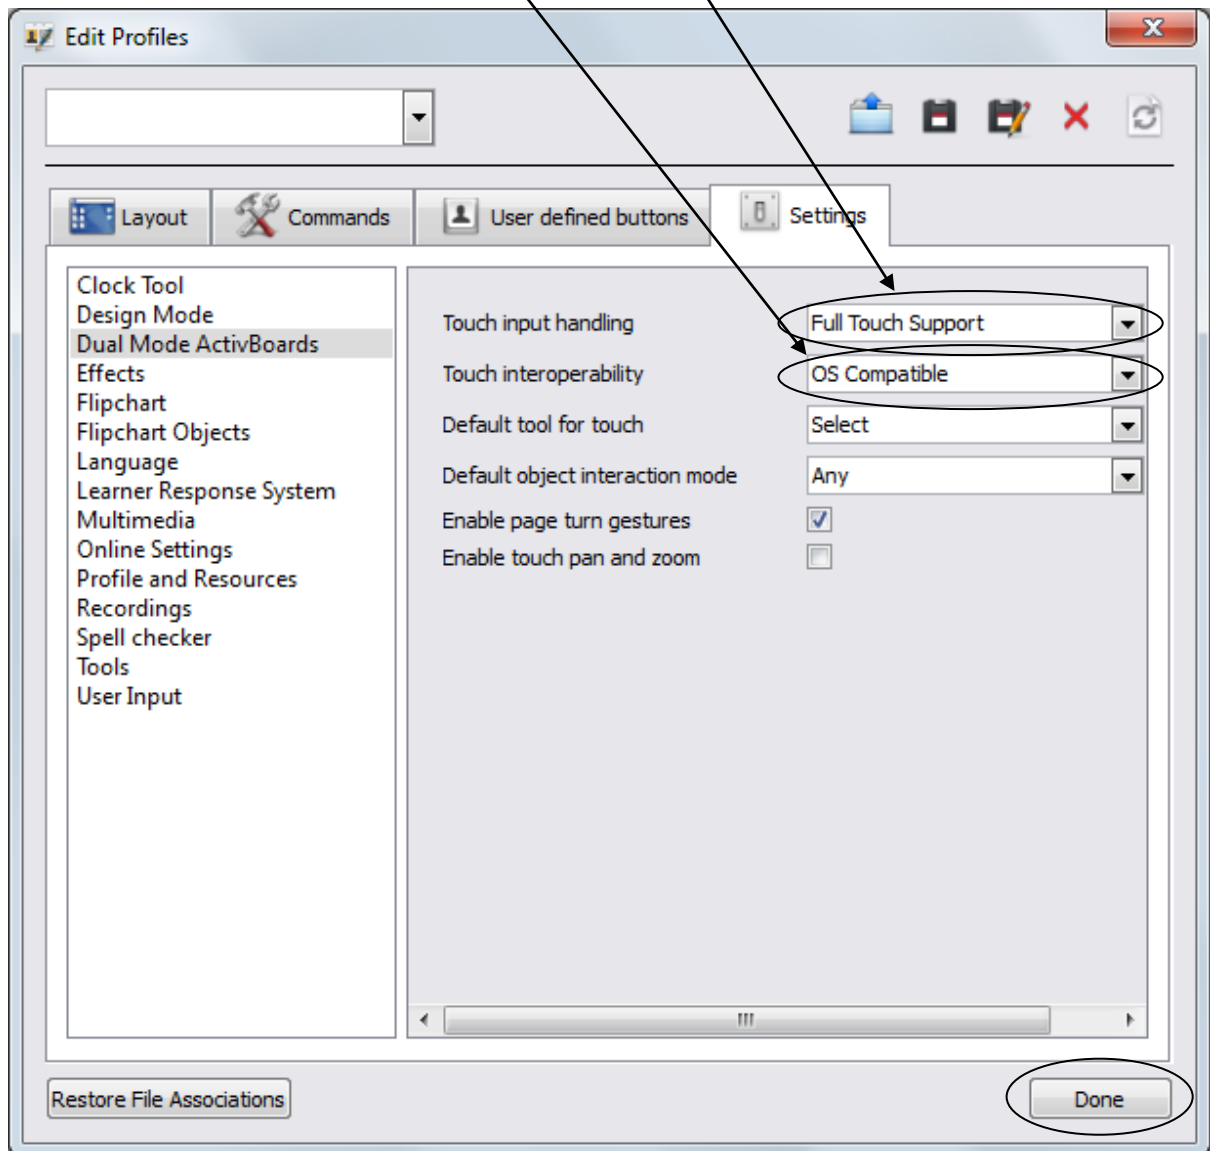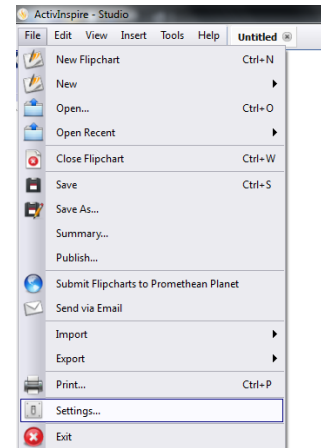

The pen will now work along with other ActivInspire features.